

E1 Essential Revolving Door Maintenance

Contact us for
pricing and our
special bundle
pricing



Performance

- Test speed control, breakaway function and each individual collapsing blocks
- Clean and remove all debris in revolving door's major components
- Clean and properly grease speed control inside pot
- Supply and install new bearings pack with grease and inspect bearing cup for damage
- Clean and re-hung all doors
- Test revolutions, collapsing and speed control; adjust if possible and as necessary
- Check for any unusual repair and wear and provide a detailed report



Price Below Is Based On Installation Being Completed During Maintenance*

PARTS	DESCRIPTION	ADD COST
Speed control	<ul style="list-style-type: none"> • Supply and install Manual Speed control replacement 	Contact Us
Weathering	<ul style="list-style-type: none"> • Revolving door weather stripping on door leaf's • Supply and install (4pcs) of rubber & felt verticals, (4pcs) of all rubber bottoms, (4pcs) rubber felt tops • **Horizontal no bigger than 48" and vertical no bigger than 96" 	Contact Us

*Price is based on regular business hours (7:30am-5pm)*Additional work not included in installation will be billed at \$85/hr + material